




CK-S & CK-L Field Installation for the QTM & QOM Series

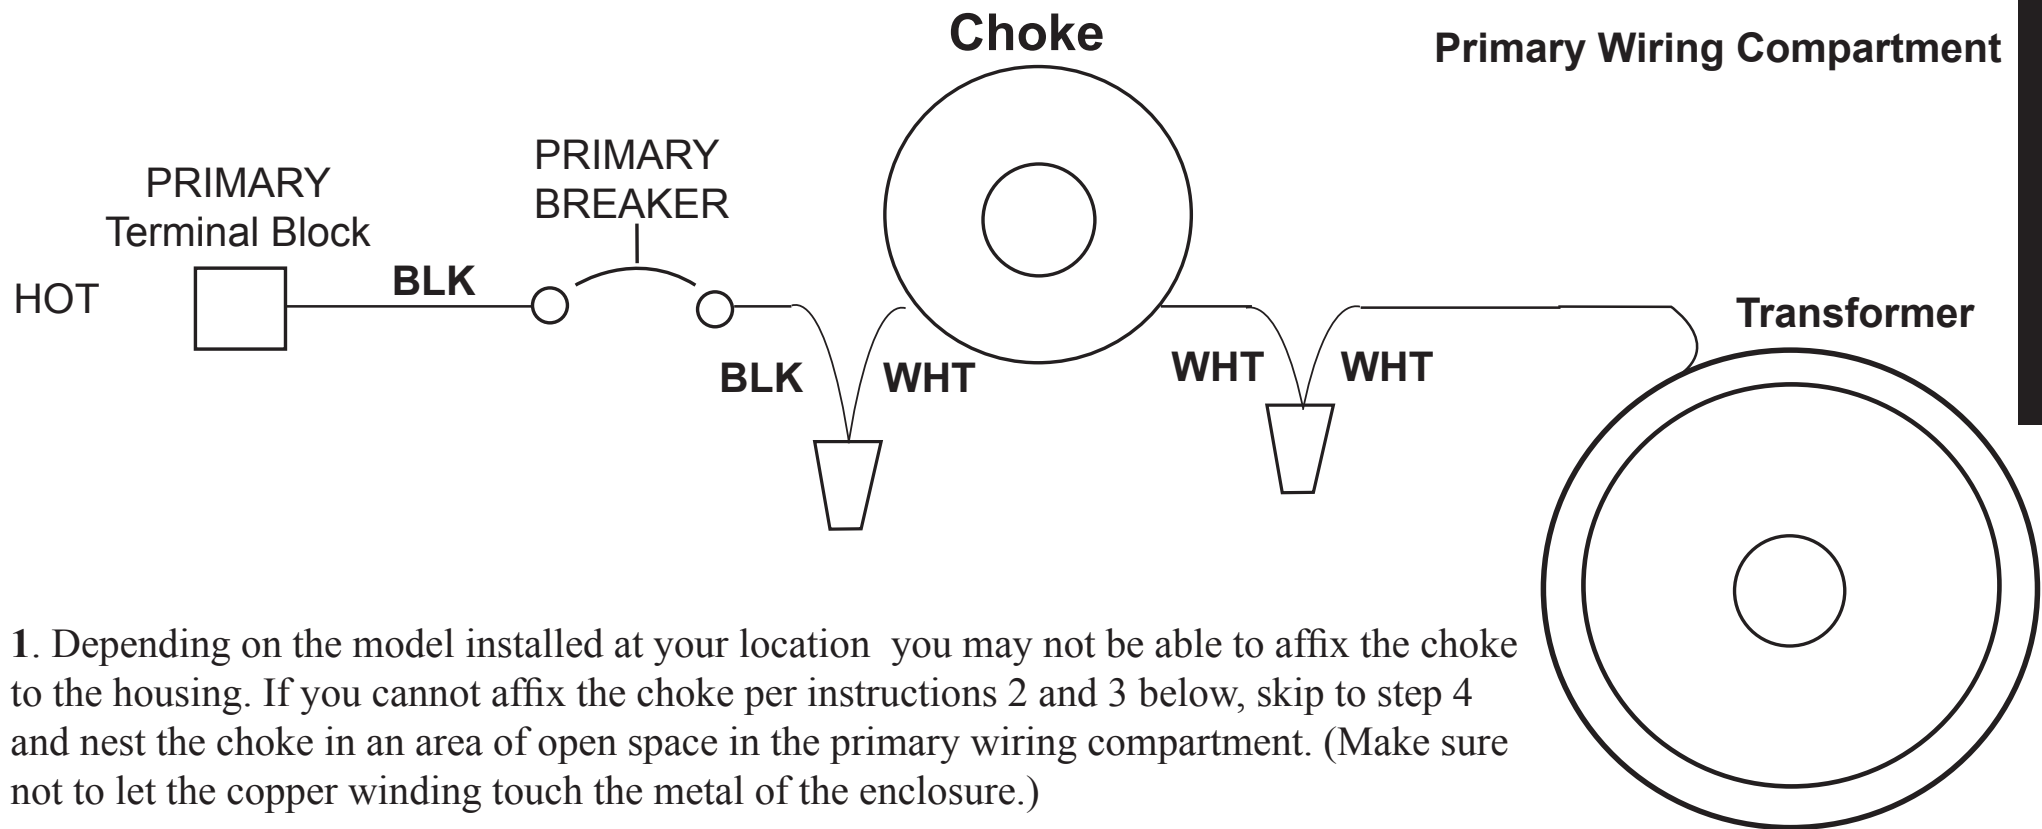

1. Depending on the model installed at your location you may not be able to affix the choke to the housing. If you cannot affix the choke per instructions 2 and 3 below, skip to step 4 and nest the choke in an area of open space in the primary wiring compartment. (Make sure not to let the copper winding touch the metal of the enclosure.)

2. Stick included white, 3M Pad on the housing side.

3. Use supplied hardware to affix choke to housing, centering the choke over the supplied 3M Pad.

4. Connect the choke per the detail above with the supplied wire nuts.